








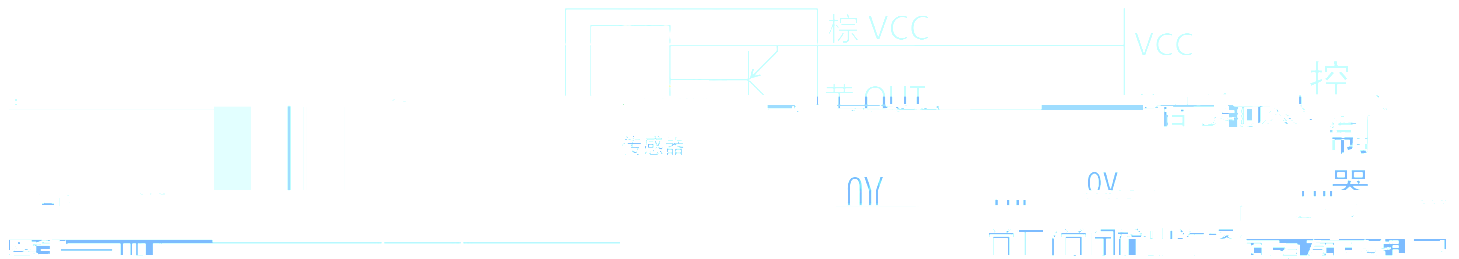

## XKC-Y26A-PNP (开关量型) 输出原理及接线方法

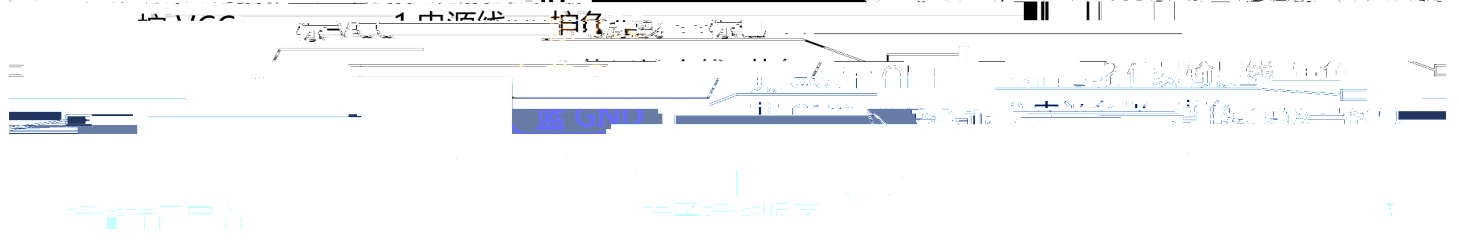

### PNP信号输出 连接控制型开关MOC的接线方法

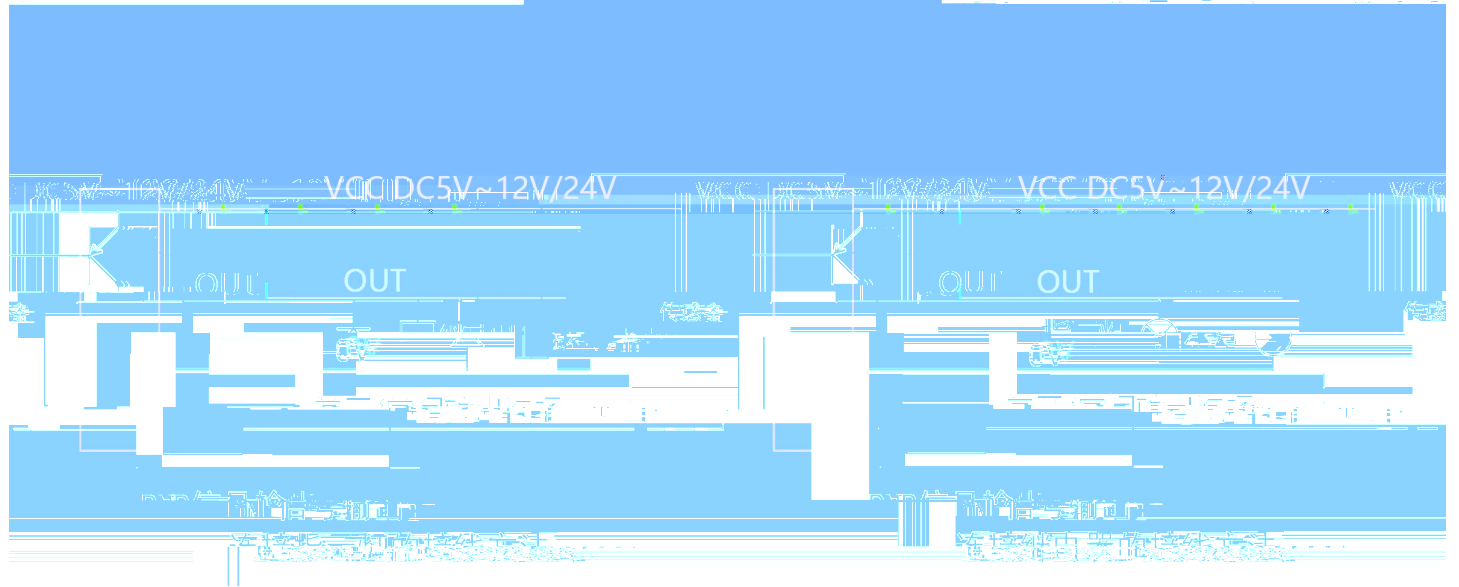





[Redacted Header]		
[Redacted Column 1]	[Redacted Column 2]	[Redacted Column 3]
	[Redacted Column 2]	[Redacted Column 3]
	[Redacted Column 2]	[Redacted Column 3]
	[Redacted Column 2]	[Redacted Column 3]
[Redacted Column 1]	[Redacted Column 2]	[Redacted Column 3]
	[Redacted Column 2]	[Redacted Column 3]
	[Redacted Column 2]	[Redacted Column 3]

